



FILM SCREENS
VIVID



GRAND SERIES
USER MANUAL

CONTENTS

VIVID MODELS
VFS292FS, VFS2120FS, VFS2112FS

INTRODUCTION 04

- copyright
- included in box

PRECAUTIONS 06

- attention
- environmental conditions
- cautions

ASSEMBLY 08

INSTALLATION 11

INTRODUCTION

Dear Customer!

Congratulations on making your purchase. We hope you enjoy using your new projection screen.

In order to make each viewing a unique video-cinema experience, we have provided this user manual containing detailed information about installing and operating your new projection screen.


Be sure to read through all the information in this manual before using and/or attempting to install the equipment.

Please note that your warranty will become void in the event that the equipment is handled, installed, or operated incorrectly.

The contents of this user manual will guide you through the proper handling, installing, and operating of your new Vivid projection screen.

Included in Box:

- connectors (8)
- mounting parts (2)
- plastic screws
- frame corners (4)
- screws (16)
- left & right frames
- supporting tubes (4)
- upper & bottom frames
- fabric

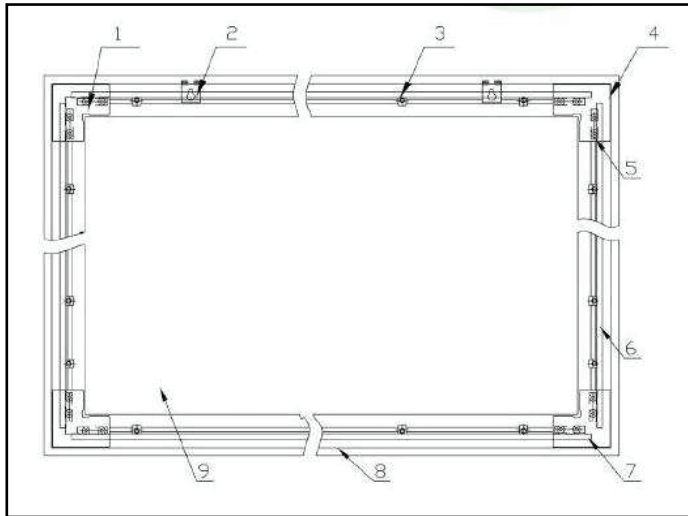

DECLARATION

The projection screen was checked, tested and found to be faultless before shipment was effected.

PRECAUTIONS

Attention:

Fix Frame Screen consists of a light-weight aluminum frame. Handle it with care to avoid damage.

When not in use, cloth or curtain can be used to cover the screen to avoid dirt or foreign objects.

When cleaning the screen fabric, please use soft cloth with little clean water. No cleaning agents shall be used.

Please do not touch the fabric with fingers or sharp edge like a blade.

Do not hang anything on the frame.

Environment:

Temperature should be between -5°C(22°F) and 40°C(104°F). Humidity level below 90%.

Not too dusty.


Cautions:

The screen should be mounted indoors.

Please make sure that the wall structure can support the weight and is suitable for installation.

Please make sure that screen is level after installation.


This installation process can only be performed by adult.

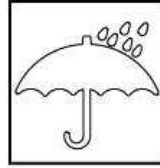

No Moisture




Keep Distance

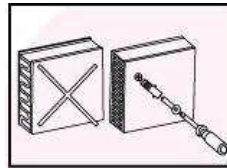

Wall Mounted Installation



No Heavy Objects

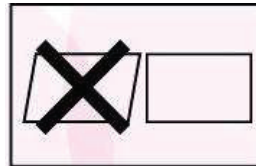

Level Frame



Only For Adults

ASSEMBLY

1. Open the package and make sure no components are missing.

2. Put the frame on a clean table with frame slot upward.





3. Put the plastic into the slot and arrange its position according to the red arrows.




4. Slide the black mounting parts onto the upper frame (frame without label).

5. Slide the connector at the two ends of slot in each frame. Put the frames together.

6. Place the corner plate where the corner frames meet. Use screws to secure.

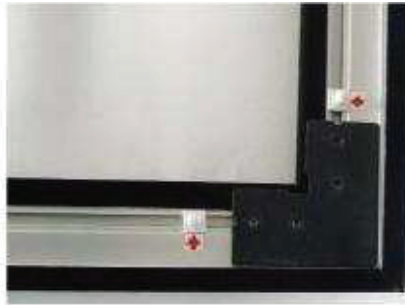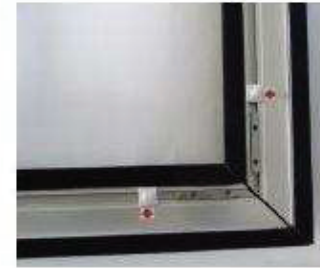

7. Unfold the fabric and insert the tube to the four edges of the fabric.

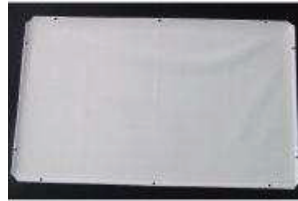

8. Stretch the fabric and match the holes with the plastic screw on the frame. Install the fabric on upper & bottom frame first, then left & right frame.



9. Adjust the screw to ensure there is no crease on the fabric.

INSTALLATION

10. Put the screws onto the wall and hang the frame screen.



NOTE: Some wrinkles are normal due to packing. They will naturally disappear after screen material has been stretched



WWW.SKYWALKER.COM

9390 VETERANS MEMORIAL PKWY, O'FALLON, MO 63366 | 800.844.9555