

WARNING:

INSTALLATION OF ANTENNAS NEAR POWER LINES IS DANGEROUS. FOR YOUR SAFETY, FOLLOW THE INSTALLATION INSTRUCTIONS.

INSTALLATION

This SENSAR antenna may be installed inside or outside on any mast or pole. **DO NOT MOUNT OVER CHIMNEY OPENING.**

STEP 1. Make sure "W" opening is on bottom side of antenna head, foot embossing points down. Slide metal mounting bracket up into back bracket on antenna and attach with pins and E-clips. See Figure 1.

STEP 2. Insert "U" bolt thru mast clamp and mast bracket and start hex nuts onto "U" bolt. See Figure 1.

STEP 3. Slide mast thru "U" bolt and tighten hex nuts with 7/16" wrench.

Model GS-1100, VM-1100 (Non-amplified Models ONLY) Attaching Download Cable

STEP 1. Attach download cable to F-jack on back of antenna head and tighten securely. (Figure 4). Tape download to mast and run cable to TV.

STEP 2. Attach "F" connector to download and connect to "F" jack on TV.

Models GS-2200, VM-2200 (Amplified Models ONLY) Attaching Download Cable

STEP 1. Attach download cable to F-jack on back of antenna head and tighten securely. (Figure 4) Tape download to mast and run cable to power supply location.

STEP 2. Attach "F" connector to download and connect to "F" jack on power supply marked "TO PREAMP". See Figure 2.

STEP 3. Attach "F" connector to cable from TV and connect to "F" jack on power supply marked "TO TV". See Figure 2.

STEP 4. Mount the two #6 screws vertically 3-1/4" apart leaving screw heads approximately 1/8" from wall. See Figure 3.

STEP 5. Hang power supply onto screws and plug power supply AC power cord into receptacle.

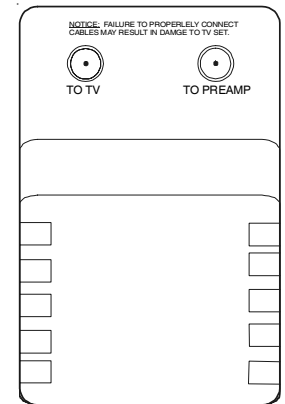 


Figure 2

U.S. Pat. No. D355,887,
D358,365, 5,515,240 Power
supply housing design.

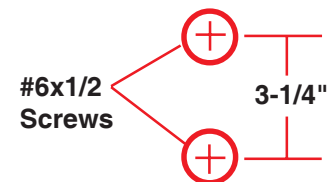 


Figure 3

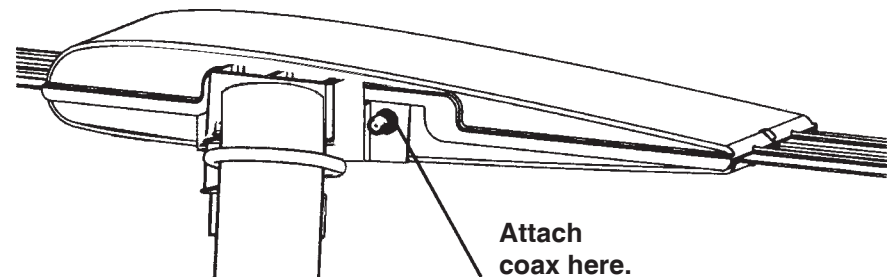 
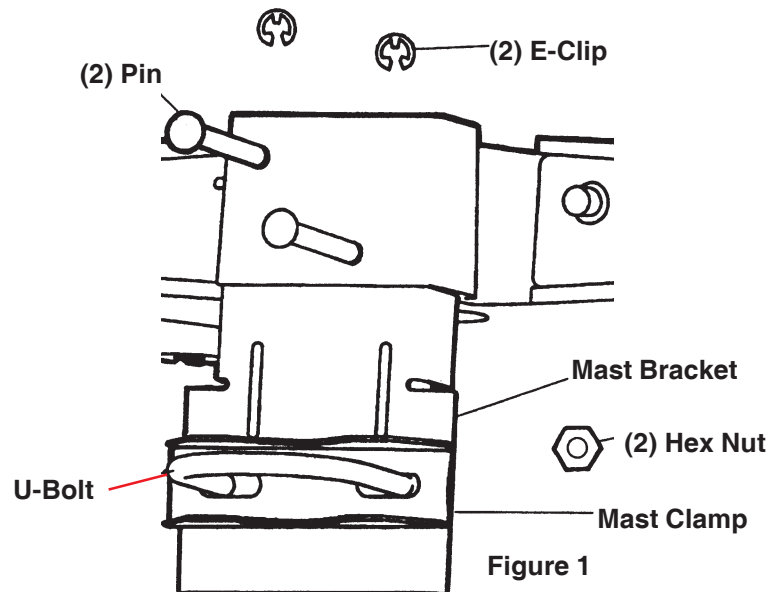 


Figure 4

CAUTION: No splitters or coupler should be installed in the coax line between the antenna and power supply.

90 DAY LIMITED WARRANTY

Winegard Company warrants this Winegard product against any defects in materials or workmanship within 90 (ninety) days from date of purchase. No warranty claim will be honored unless at the time the claim is made, you present proof of purchase to an authorized Winegard dealer (if unknown, please contact Winegard Company, 3000 Kirkwood Street, Burlington, IA 52601-2000, Telephone 319-754-0600).

Winegard Company (at its option) will either repair or replace the defective product at no charge to you. This warranty covers parts, but does not cover any costs incurred in removal, shipping or reinstallation of the product. This limited warranty does not apply if the product is damaged, deteriorates, malfunctions or fails from: misuse, improper installation, abuse, neglect, accident, tampering, modification of the product as originally manufactured by Winegard, usage not in accordance with product instructions or acts of nature such as damage caused by wind, lightning, ice or corrosive environments such as salt spray and acid rain.

The 90 Day Warranty is provided on the condition that the equipment is properly delivered with all handling and freight charges prepaid to your Winegard dealer for return to our factory for repair or replacement. Winegard dealers will arrange for the replacement or repair and return to you without charge the product which failed due to defective material or workmanship.

WINEGARD COMPANY WILL NOT ASSUME ANY LIABILITIES FOR ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, MADE BY ANY OTHER PERSON.

ALL OTHER WARRANTIES WHETHER EXPRESS, IMPLIED OR STATUTORY INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY ARE LIMITED TO THE 90-DAY PERIOD OF THIS WARRANTY.

The foregoing shall be the sole and exclusive remedy of any person, whether in contract, tort or otherwise, and Winegard shall not be liable for incidental or consequential damage or commercial loss, or from any other loss or damage except as set forth above.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion of limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

 
HOW TO PROVIDE LIGHTNING PROTECTION FOR TV ANTENNA AND SET

STEP 1. Mount the lightning arrestor as close as possible to where the downlead enters the house.

STEP 2. The ground wires for both the mast and the downlead should be copper or aluminum wire, number eight (8) or larger.

STEP 3. The downlead wire from the antenna to the lightning arrestor should be secured every four (4) to six (6) feet to prevent whipping.

NOTE: In the case of a "ground up" antenna installation, it may not be necessary to ground the mast if the mast extends four or more feet into the ground. Consult a TV serviceman for proper depth in your location.

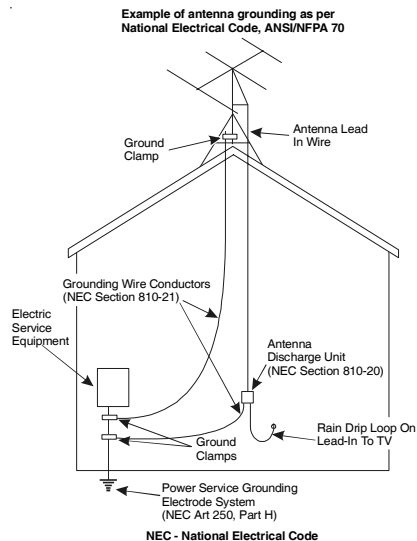

WINEGARD®

 
SENSAR® TV ANTENNA

Amplified Model GS-2200, VM-2200

Non-amplified Model GS-1100, VM-1100

Made in U.S.A.

U.S. Patent No. D500,496

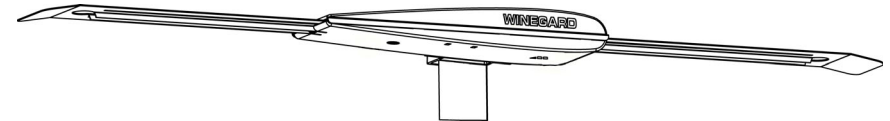

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE POWER SUPPLY TO RAIN OR MOISTURE.

WARNING: INSTALLATION OF ANTENNAS NEAR POWER LINES IS DANGEROUS. FOR YOUR SAFETY, FOLLOW THE INSTALLATION INSTRUCTIONS.

NOTE: Any alteration or modification to product or any other use of the parts other than their intended use, voids the warranty.